



# Disassembling Panasonic GU87 Keypad removal

How to take the keypad out

Written By: Van





## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Tri-point Y0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Place your hands on the phone as shown in picture. Slightly pull the tab away from the phone with your thumb.

## Step 2



- Lift the battery up from the phone as shown. Replace with a new battery if the old battery has become worn out.



## Step 3 — Back cover




- Remove the rubbers with a tweezers.

## Step 4




- Remove the 4 screws as shown in the picture

## Step 5

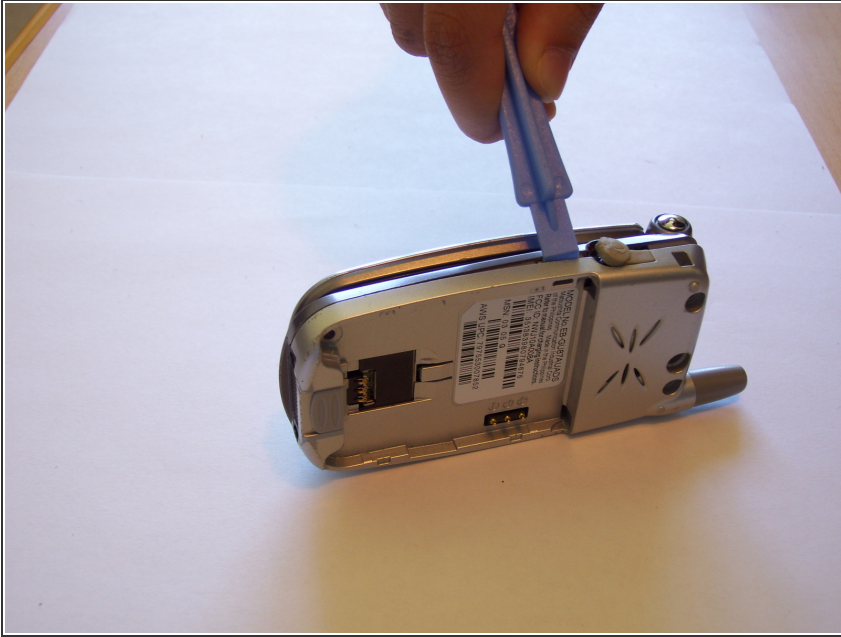

- laid it on a side, use the tool to separate the front and back.

## Step 6

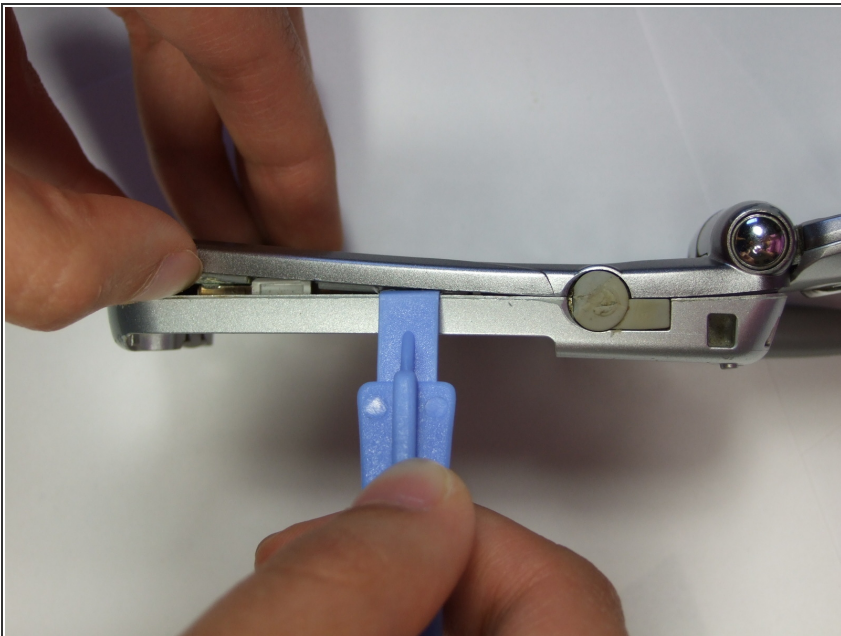

- Put the tool in friction tabs and force down to open the cover as shown in the picture
- Pop it open using your thumbs

## Step 7 — Keypad removal



- Pull the keypad apart

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-16 09:00:07 PM.